

ENGLISH
<div> <div>Double timer</div> <div>Head nr. 582046</div> <div> <div>Technical specifications</div> <div> <div>Power: 2 x 1,5 V AAA-baterije (Inkl. included)</div> <div>Time settings: 0 - 99 hours 59 min 59 sec</div> </div> </div> </div>
<div> <div>Operating instructions</div> <div> <ul style="list-style-type: none">Open the stand and then slide to open the cover at the back. Insert the battery into the compartment with the + of the appropriate place on the back. Slide to close the cover at the back. After inserting the battery a short beep sounds and the screen displays 0.000. The timer is ready for use now and has an auto and countdown function. Always keep the back of the timer allowing it to be attached to a metal surface. With a start at the back to use on tabletop. With hole at the back for wall hanging. </div> </div>
<div> <div>Setting alarm mode</div> <div> <ul style="list-style-type: none">Press ▶ to set alarm mode at the side of the timer. High volume. Low volume. Glent and red light flashing. </div> </div>
<div> <div>Button</div> <div> <div>▶ Timer 1</div> <div>▶ Timer 2</div> <div>▶ Memory button</div> <div>▶ HOUR</div> <div>▶ HOUR</div> <div>▶ MIN</div> <div>▶ setting minute</div> <div>▶ SEC</div> <div>▶ setting seconds</div> <div>▶ start or stop the timer</div> </div> </div>
<div> <div>Count down</div> <div> <ul style="list-style-type: none">Press T1 to choose timer Press HOUR/MIN/SEC buttons to your desired time. Hold the buttons to increase the time quickly. Press ▶ to stop the timer and the timer will start. When large time is set, press T1 button to start count down. Press it again to stop counting. When time is set, press HOUR and MIN at the same time to reset timer. Press ▶ to switch to 0.000. It will switch to 0 immediately. Press ▶ button to stop counting. Alarm or red light flashing will stop for one minute when no operation. </div> </div>
<div> <div>Count up</div> <div> <ul style="list-style-type: none">Press T1 to choose timer Press HOUR/MIN/SEC buttons to your desired time. Hold the buttons to increase the time quickly. Press ▶ to stop the timer and the timer will start. When large time is set, press T1 button to start count down. Press it again to stop counting. When time is set, press HOUR and MIN at the same time to reset timer. Press ▶ to switch to 0.000. It will switch to 0 immediately. Press ▶ button to stop counting. Alarm or red light flashing will stop for one minute when no operation. </div> </div>
<div> <div>Memory function</div> <div> <ul style="list-style-type: none">Press T1 to choose timer. Hold M button for 3 seconds, display will flash. Press HOUR/MIN/SEC to your desired time. Hold the button to increase the time quickly. Press M to save the data. When you press HOUR and MIN at the same time to clear memory. Once user sets the memory time, he can return the time memory quickly by only pressing M button when timer is stopped. Next time when T1 button can work at the same time without any influence to each other. </div> </div>
<div> <div>Replacing the battery</div> <div> <ul style="list-style-type: none">If the digits are difficult to read, this is a sign that the battery is getting low. Then the battery must be replaced by opening the cover at the back. Always open the stand first and slide to open and close the battery compartment cover at the back. </div> </div>
<div> <div>Battery safety instructions</div> <div> <div>DANGER OF EXPLOSION! Do not use re-chargeable or throw in the fire or short-circuit.</div> <div> <ul style="list-style-type: none">Do not expose batteries or appliances to extreme temperature such as direct sunlight or fire. Do not place the product on a heating source. Batteries are already installed, remove them from the battery compartment with a clean cloth. Dispose the batteries in accordance with the provisions. Always contact the linked battery expert. The batteries must be removed from the appliance before it is scrapped. Do not remove the built-in battery yourself! Bring the appliance to a qualified professional. Batteries is to be disposed of safely. CAUTION! There is a danger of explosion if the batteries are inserted incorrectly. Do not use the same battery type. Do not use old and new batteries together and of different type from different manufacturer. Always insert batteries in accordance with + and - polarity as illustrated in the battery compartment. Batteries are not to be recharged. Store old batteries out of the reach of children. Seek medical help immediately if batteries are swallowed. Do not allow children to change batteries. Remove the battery when you are not going to use the product for a long period of time. </div> </div> </div>
<div> <div>Warning</div> <div> <ul style="list-style-type: none">Always affecting the functionality of the appliance which becomes apparent within one year after purchase will be repaired free of re-placement provided the appliance has been used and maintained in accordance with the instructions and has not been abused or misused in any way. Your statutory rights are not affected. If the appliance is claimed under warranty, state where and when it was purchased and include proof of purchase (e.g. receipt). In line with our policy of continuous product development we reserve the right to change the product, packaging and documentation specifications without notice. </div> </div>
<div> <div>Discarding an Environment</div> <div> <ul style="list-style-type: none">Do not decommissioning the appliance, the product must be disposed of with other household waste. Instead, if you're responsibility to dispose of your waste equipment by handing it over to a designated collection point. Failure to follow this rule may be penalized in accordance with applicable regulations on waste disposal. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local waste collection company. The manufacturers and importers do not take responsibility for recycling, treatment and ecological disposal, either directly or through a public system. For more information about where you can drop off your waste for recycling, please contact your local waste collection company. The manufacturers and importers do not take responsibility for recycling, treatment and ecological disposal, either directly or through a public system. </div> </div>
<div> <div>Please non-destructively separate spent batteries and accumulators that are not enclosed in the original packaging or are not enclosed in the original packaging. Do not use the equipment before returning it to a collection point. Unless the used equipment is separated in order to prepare it for re-use.</div> </div>
<div> <div>INDOOR</div> <div>READ MANUAL!</div> <div>CE</div> </div>
DEUTSCH

